


## UV Irradiation to Enhance the Effect of Deep Bath of Hydrogen Peroxide for Packaging Material Sterilisation in Aseptic Packaging Machines

by Guido Moruzzi  
Tetra Pak, Modena, Italy

**Tetra Pak**  
protects what's good™

### “Tetra Brik Aseptic” Sterile System

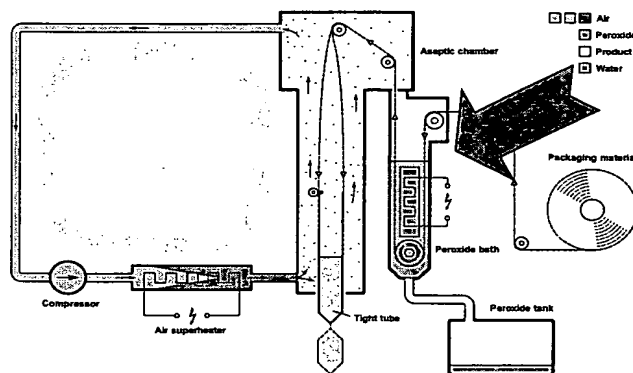



- The packaging material is sterilised by passage through a bath of  $H_2O_2$
- Contact time, concentration and temperature are the control parameters

**Tetra Pak**  
protects what's good™

Guido Moruzzi Aseptipak 2004

## Increasing the Speed of the Filling Machines

- Web Speed Increases
- Residence time in peroxide bath decreases

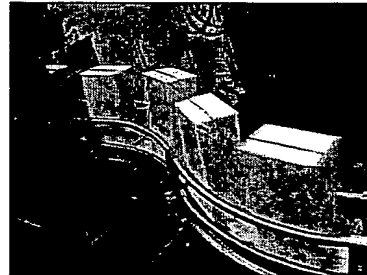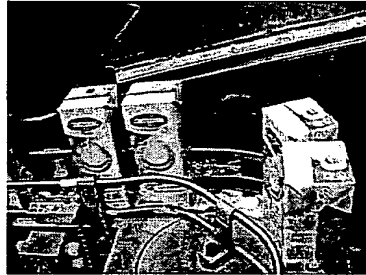


**Tetra Pak**  
protects what's good™

Guido Moruzzi Aseptipak 2004

## Compensating for reduced time in the bath

Multiplying the bath?

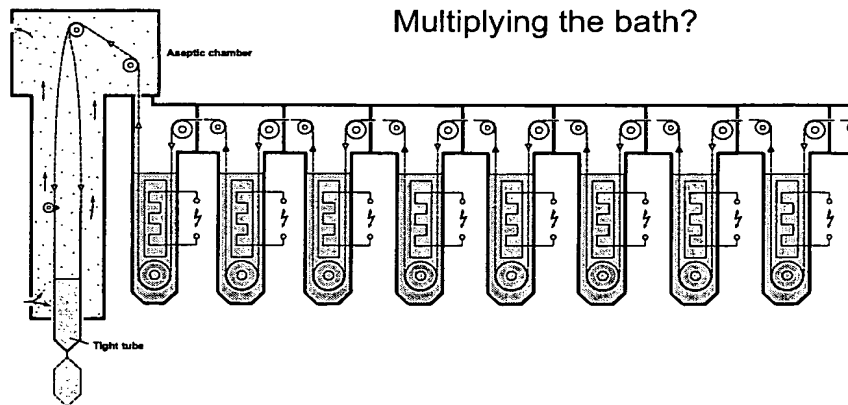


**Tetra Pak**  
protects what's good™

Guido Moruzzi Aseptipak 2004

## Adding a UV lamp?

- A UV lamp
- Irradiating the packaging material
- AFTER  $H_2O_2$  bath AND drying

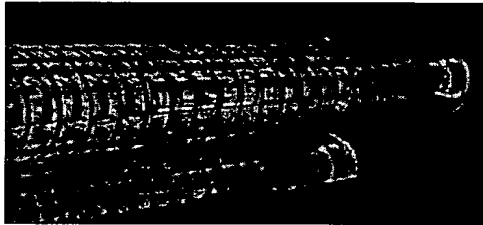

## So, What's Special?


Previous art (Peel & Waites, 1980):



This concept




## Irradiating after drying

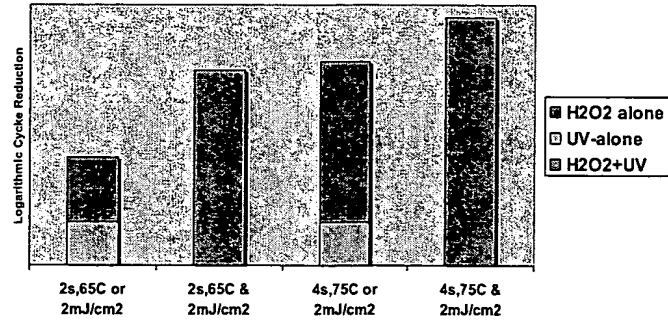

- Results obtained on a rig – not a perfect simulation of the filling machine
- Spores of *Bacillus subtilis* A
- H<sub>2</sub>O<sub>2</sub> concentration 35%
- Synergic effect clearly present

## Irradiating while dry

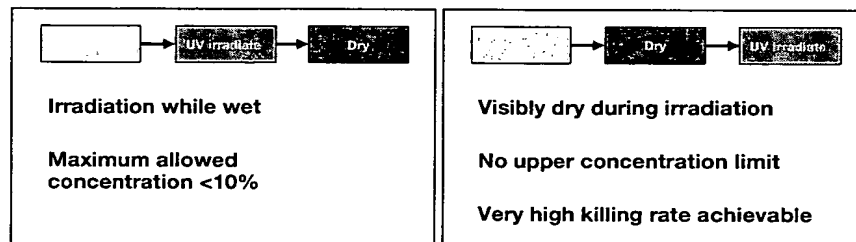

## Where is the Hydrogen Peroxide?


- The synergy is clearly observable
- The packaging material surface is dry
- “There must be” some hydrogen peroxide left somewhere for the synergy

## Prof. R.E. Marquis, University of Rochester, NY

- Bacterial spores absorb  $H_2O_2$  preferentially to water (“concentrative uptake”)
- The spores absorb an amount of hydrogen peroxide equal to 5 to 50% of their dry weight
- Large part of the absorbed hydrogen peroxide can be recovered by washing
- The absorbed hydrogen peroxide is “fully potent” for killing
- The absorbed hydrogen peroxide can be activated by UV irradiation even after 24 hours or more of drying

Rutherford, Reidmiller, Marquis, J. Microbiol. Meth. 42(2000), 281-290


### Uptake of Hydrogen Peroxide by *B. megaterium*

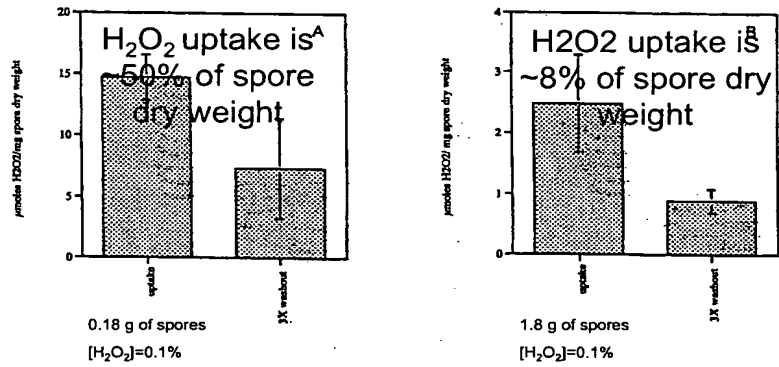

1/3 of absorbed H<sub>2</sub>O<sub>2</sub> can be washed out in active form

Rutherford, Reidmiller, Marquis, J. Microbiol. Meth. 42(2000), 281-290

### Uptake of Hydrogen Peroxide by *Cl. sporogenes*

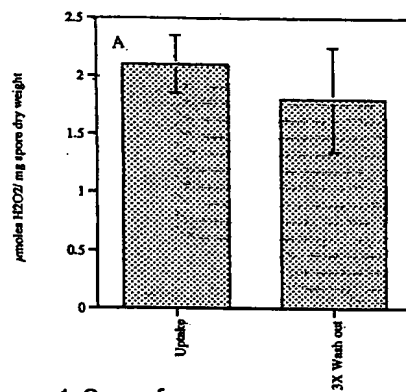


1.8 g of spores  
[H<sub>2</sub>O<sub>2</sub>]=0.1%

- H<sub>2</sub>O<sub>2</sub> uptake is ~7.5% of spore dry weight
- Nearly all absorbed peroxide can be washed out in active form

## Effect of UV irradiation *Cl. sporogenes* after peroxide uptake

[H<sub>2</sub>O<sub>2</sub>]=0.15%

Drying at 25°C for:

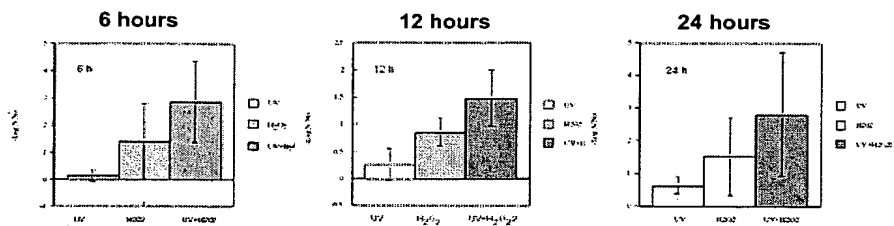

The synergy between hydrogen peroxide and UV is there even after 24 hours drying

R.E. Marquis et al., unpublished

**Tetra Pak**  
protects what's good™

Guido Moruzzi Aseptipak 2004

## We know what happens:

- UV activates the hydrogen peroxide in the spore body
- UV outside the spore body not useful for killing



- Irradiation while wet
- External H<sub>2</sub>O<sub>2</sub> shields the UV
- Maximum allowed concentration <10%



- Visibly dry during irradiation
- No shielding
- No upper concentration limit
- Very high killing rate achievable


**Tetra Pak**  
protects what's good™

Guido Moruzzi Aseptipak 2004

## UV Lamp


- Experiments were run with UV at 222 and at 254 nm
- Wavelength (UV-C) is not critical for killing
- UV dose is critical
- Choice of UV lamp based on:
  - High intensity of emission
  - Ease of industrial operation

## Excimer Lamp by Heraeus Noblelight GmbH

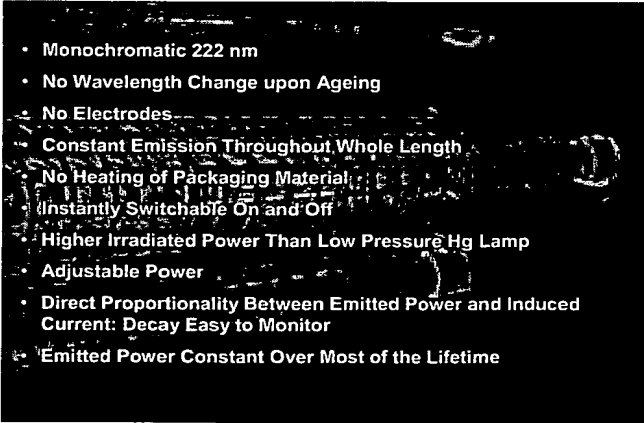- 
- Monochromatic 222 nm
  - No Wavelength Change upon Ageing
  - No Electrodes
  - Constant Emission Throughout Whole Length
  - No Heating of Packaging Material
  - Instantly Switchable On and Off
  - Higher Irradiated Power Than Low Pressure Hg Lamp
  - Adjustable Power
  - Direct Proportionality Between Emitted Power and Induced Current: Decay Easy to Monitor
  - Emitted Power Constant Over Most of the Lifetime




## The Machine Application

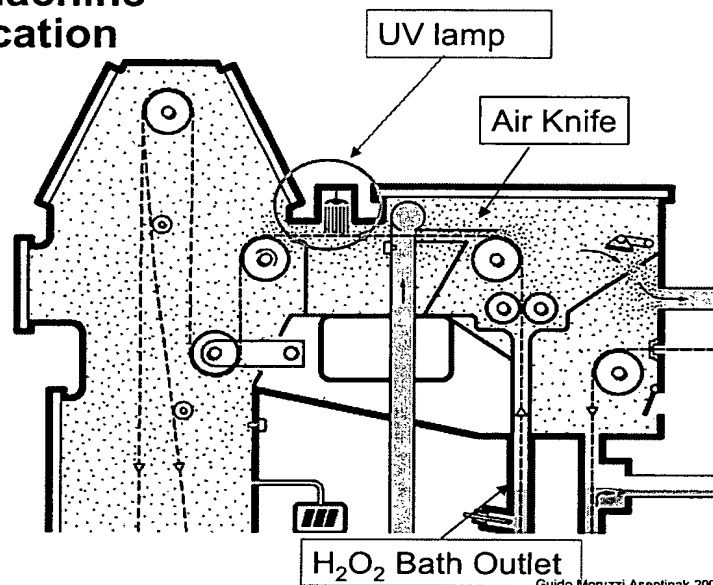

**Tetra Pak**  
protects what's good™

Guido Moruzzi Aseptipak 2004


## Current Machine Design

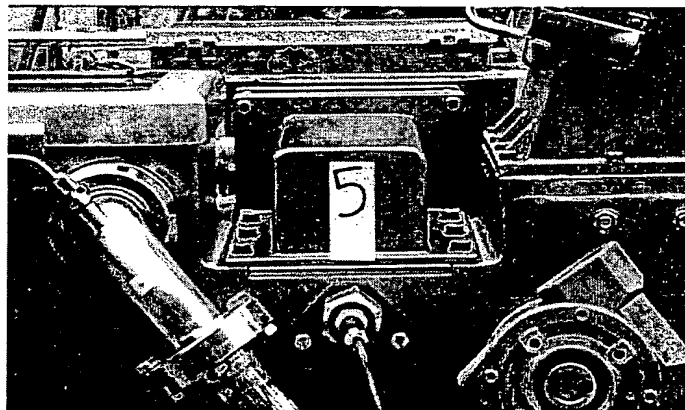

**Tetra Pak**  
protects what's good™

Guido Moruzzi Aseptipak 2004

## Current Machine Design

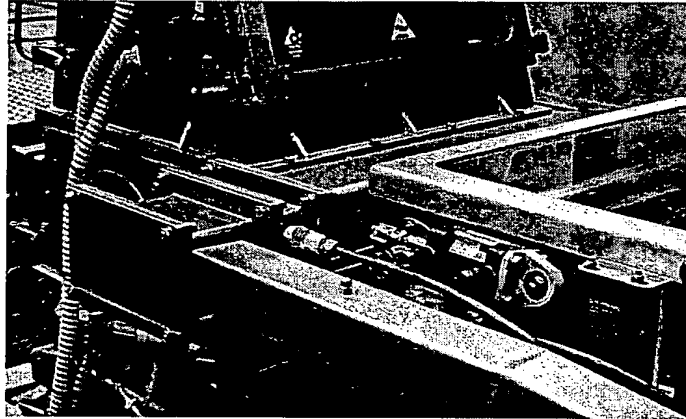


**Tetra Pak**  
protects what's good™

Guido Moruzzi Aseptipak 2004

## Example of Microbiological Results (on real filling machine)

- Up to nearly 3-fold increase of bath effect
- About 1/10 sec exposure time

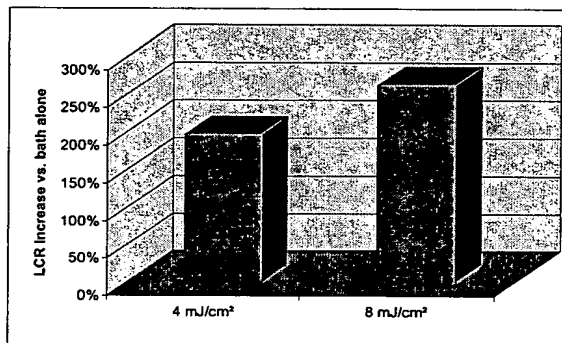

- Test Organism is *Bacillus subtilis A*
- Test Method:  
Moruzzi, Garthright, Floros, Food Control 11 (2000) 57-66


**Tetra Pak**  
protects what's good™

Guido Moruzzi Aseptipak 2004


## The advantage of the add-on UV-lamp sterilisation unit

- Two families of filling machines
  - “Flex”
    - “Normal” speed (7000 p/h)
    - High shape and volume flexibility
  - “Speed”
    - High speed
    - No volume flexibility
- One Platform: modular construction

## Platform Modular Concept

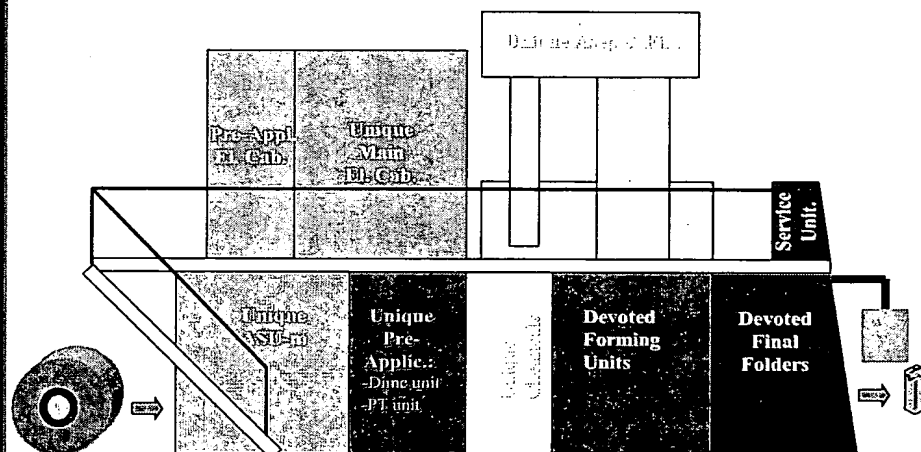

## A3 Platform Concept Flex- Speed

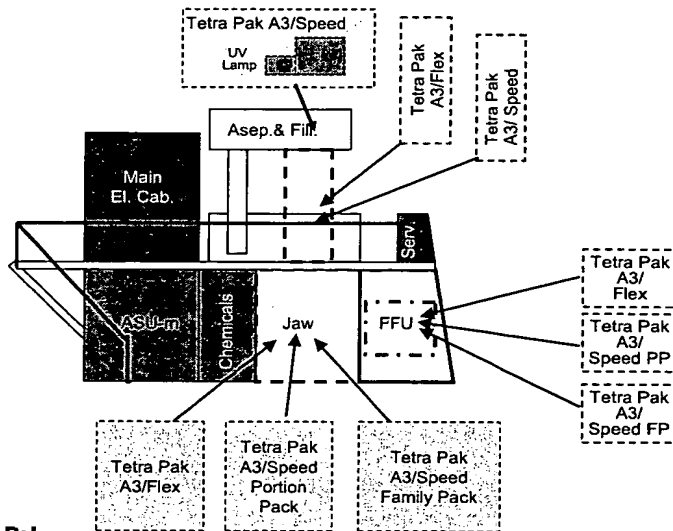

**Tetra Pak**  
protects what's good™

Guido Moruzzi Aseptipak 2004